

PRODUCTS AFFECTED

Standard Super

SURFACE PROTECTION

These products have deeply inlaid mineral crystal particles in the wearlayer acting as a slip resistant agent. They should not be sealed under any circumstances, unless the slip resistance is considered not important.

INITIAL MAINTENANCE

Remove loose dirt and debris from the newly installed floor using broom or vacuum. Ensure all adhesive residues are removed with due regard to supplier's recommendations. Do not use high abrasive pads or scourers.

Wash floor with a neutral detergent by low speed scrubbing machine fitted with a blue, green or brown pad according to the dirt level on the floor. Ensure all detergent residues are rinsed and removed from the floor.

DAILY MAINTENANCE

Remove loose dirt with broom or vacuum; damp mop with neutral detergent.

PERIODIC MAINTENANCE

Machine autoscrub with nylon brush at high speed as required, or wash floor with a spray detergent and buff with blue or red pad at 450rpm.

For further enquiries regarding the maintenance of Gerflor products, please contact your Gerflor Technical Manager.

